

## Technical Advisory

### Installation Instructions Cables without Ripcords

#### **Jacket Removal:**


The recommended method for removing the jacket is to use a tool such as the Sargent Tool SA 28450, see the figure.

1. The tool is hinged and can be opened to slide over the cable jacket.
2. Slide the tool over the cable and place in the cable in the largest guide as shown.
3. Rotate the tool around the cable one time only to score the jacket.
4. Open the tool and remove it.
5. If the jacket is not cut through, flex the cable on both sides of the score to separate the jacket.
6. Pull the jacket off the pairs.
7. Spread out the pairs and clip off the center filler as close to the jacket as possible

Tool Positioned over jacket ready to score.



Jacket removed from the cable

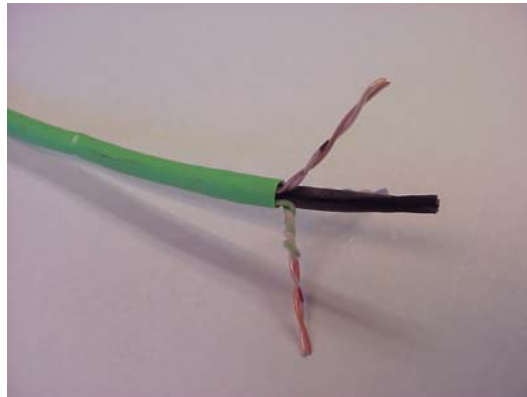

Cut the Flex Web

